



PM-IO-5-SM LoRaWAN IO Module

FEATURES

- More than 2 year on single battery charge
- Tinovi Soil Moisture/EC/Temperature sensor option
- BME280 Air Temperature/Humidity/Pressure sensor option
- OPT3001 Lux sensor option
- 12v booster pulse solenoid switch output option
- Pulse counter
- Water leak detector and valve close output trigger
- Dust and waterproof IP68.
- LoRaWAN class A device, may be activated with OTAA or ABP.
- Setup via USB CDC-ACM virtual COM port.
- Android application for USB setup



PM-IO-5-SM LoRaWAN IO Module

ELECTRICAL PROPERTIES

	Min/Sleep	Typical	Max
Supply voltage (VCC), V	2.5	3.6	6
Working current (VCC=3.6V) , mA	0.1	12	150
Operating Temperature Range, Celsius	-20	25	70

Sensor consumes max 0.1 mA in sleep mode, 12 mA in active mode and 150 mA in transmitting mode. Battery is 3.7v 18650. Device may be powered from any 5v Micro-USB power source. After power up sensors wait 10 seconds for USB configuration session connection from android application or USB CDC terminal, if none is connected sensors turns off USB hardware and starts normal operation.

PHYSICAL PROPERTIES

dimensions 80x130x35
Soil Sensor cable length 1.5m

SOIL SENSOR MEASUREMENT PROPERTIES

Soil Sensor	Resolution /avg Tolerance	Range
Dielectric permittivity (ϵ) (Temperature corrected)	0.1 ϵ /5%	1 (air) to 80 (water)
Volumetric water content - VWC calculation from Dielectric permittivity ϵ . $VWC = 0.002974 * \text{pow}(\epsilon, 2) + 0.07424 * \epsilon - 1.295$;		
Electrical Conductivity (mS/m)	0.01 mS/m /20%	0...300 mS/m
Temperature (°C)	0.1°C /3%	-20 to 70°C
Degree of water saturation in the soil	0.1% /8%	0 - 100%



PM-IO-5-SM LoRaWAN IO Module

DATA OUTPUT FORMAT

Format what you are usually getting from LoRaWAN is hex string, which you have to convert to bytes. Data output payload is variable length. To properly parse data you have to decode bits in 1st byte::

1. 1-byte setup bits:
 - a. Bit 0 - enable Tinovi PM-WCS-3-I2C Soil sensor
 - b. Bit 1 - enable BME280 air temp - humidity sensor
 - c. Bit 2 - enable OPT3001 light lux sensor
 - d. Bit 3 - reserved
 - e. Bit 4 - enable pulse counter
 - f. Bit 5 - reserved
 - g. Bit 6 - Water Leak detector flag - leak detected
 - h. Bit 7 - valve state report - On/Off
2. 1-byte Battery voltage percent: measures battery voltage and calculates percentage from 2v to 5v; To calculate actual battery voltage use equation: $2+0.03(\text{battery reading})$. for example if battery measurement shows 50% ,then actual voltage is $2+0.0350=3.5v$
resolution: 1% and range: 2v – 0% to 5v – 100%

--IF Tinovi PM-WCS-3-I2C sensor enabled (Bit 0) in setup bit:

3. 2-byte 16-bit signed integer (divide by 100) Dielectric permittivity (ϵ) (Temperature corrected) resolution: 0.1 ϵ (avg.Tolerance 5%) and range 1 (air) to 80 (water)
4. 2-byte 16-bit signed integer (divide by 10) Electrical Conductivity (dS/m) resolution: 0.01 mS/m (avg.Tolerance 20%)
5. 2-byte 16-bit signed integer (divide by 100) Temperature ($^{\circ}\text{C}$) resolution: 0.1 $^{\circ}\text{C}$ and range: -20 to 60 $^{\circ}\text{C}$ (avg.Tolerance 3%)
6. 2-byte 16-bit signed integer Volumetric Water Content (%) resolution:1% and range: 0 – 100% VWC Note: VWC is calculated from dielectric permittivity by Topp equation (Topp et al, 1980): $\theta = 4.3 \cdot 10^{-6} \epsilon^3 - 0.00055 \epsilon^2 + 0.0292 \epsilon - 0.053$

--IF BME280 enabled (Bit 1) in setup bit:

7. 2-byte 16-bit signed integer Air Temperature (divide by 100)
8. 2-byte 16-bit signed integer Air Humidity (divide by 100)
9. 2-byte 16-bit signed integer Air pressure (add 50000)

--IF OPT3001 light lux sensor enabled (Bit 2) in setup bit :

10. 4-byte 32-bit integer Light lux

--IF pulse input is enabled (Bit 4) in setup bit:

11. 4-byte 32-bit integer pulse counter output



PM-IO-5-SM LoRaWAN IO Module

COMMAND LINE

LoRaWAN configuration may be done via USB CDC-ACM virtual com port with 115200 baudrate. Before configuration you need to switch off device and then connect to usb port of your computer. On linux it will be detected as `/dev/ttyACM0`.

Device waits for 10 second after power up for USB CDC-ACM connection, then it goes to normal operation mode and is not reachable via USB CDC-ACM port. For linux permission settings please [consult](#).

On Linux you may use [minicom](#) utility to configure sensor.

For windows [PuTTY](#) may be used.

We recommend Android mobile application for sensor setup and data reading/storage

COMMAND LINE DEVICE CONFIGURATION COMMANDS

Command	Response	Explanation
<code>int <val></code>	<code><Val> OK</code>	Setup data sens interval in seconds
<code>appeui <val></code>	OK	Sets Application EUI for OTAA activation.
<code>deveui <val></code>	OK	Sets Device EUI for OTAA activation.
<code>key <val></code>	OK	Sets App Key for OTAA activation.
<code>addr <val></code>	OK	Sets Device Address for ABP activation.
<code>nwks <val></code>	OK	Sets Network Session Key for ABP activation.
<code>apps <val></code>	OK	Set APPSKEY for ABP
<code>check</code>	OK	0-Disable/1-Enable OTAA link check mode EU868 (helps reconnect device on gateway outage)
<code>sb</code>	OK	Set LoRaWAN subband 0..7 (US915 and AU921)
<code>info</code>	config vals	print this parameter setup values.
<code>csv</code>	Config csv	Get config in values comma separated
<code>ver</code>	<code><version></code>	print device type and version number
<code>ec <uS/m></code>	OK	Submerge sensor in to calibration fluid and input EC value in uS/m
<code>air</code>	OK	Hold sensor in air and execute command 0% offset()
<code>water</code>	OK	Submerge sensor in to water or soil with water and execute the command
<code>debug</code>		Enable debug mode, device does not go to sleep
<code>reset</code>		Reset device
<code>set</code>	OK	Set config byte: <ul style="list-style-type: none">a. Bit 0 - enable Tinovi PM-WCS-3-I2C Soil sensorb. Bit 1 - enable BME280 air temp - humidity sensor



PM-IO-5-SM LoRaWAN IO Module

		<ul style="list-style-type: none"> c. Bit 2 - enable OPT3001 light lux sensor d. Bit 3 - reserved e. Bit 4 - enable pulse counter f. Bit 5 - reserved g. Bit 6 - Water Leak detector flag - leak detected h. Bit 7 - valve state report - On/Off
pulse	<Val> OK	Set pulse counter offset
vwcon	OK	Set valve ON switch trigger VWC limit
vwcoff	OK	Set valve OFF switch trigger VWC limit
vtime	OK	Set valve pulse duration in milliseconds
switch	OK	1- Switch valve ON , 0 - Switch valve OFF
leak	OK	1- Switch valve OFF on water leak enabled/ 0- disabled

DOWNLINK MESSAGE

Device supports LoRaWAN downlink messages on port 1. Downlink message contains 1st command byte followed by value:

1. 0x01 + device sleep time (data sending interval) adjustment. Message should contain 5 bytes, 1st byte is 0x01 and following 4 bytes is unsigned 32-bit integer time in seconds to sleep. For example sending HEX 010000000A will set interval to 10 seconds, but 0100000E10 will set interval to 3600 secs = 1 hour.
2. 0x02 + data config byte :
 - a. Bit 0 - enable Tinovi PM-WCS-3-I2C Soil sensor
 - b. Bit 1 - enable BME280 air temp - humidity sensor
 - c. Bit 2 - enable OPT3001 light lux sensor
 - d. Bit 3 - reserved
 - e. Bit 4 - enable pulse counter
 - f. Bit 5 - reserved
 - g. Bit 6 - Water Leak detector flag - leak detected
3. 0x03 + 0x01 -valve ON or 0x00 - valve off
4. 0x04 + 2-byte valve pulse time millis
5. 0x05 + 4-byte max valve on time millis, 0 -disabled
6. 0x06 + 2-byte valve trigger ON VWC limit
7. 0x07 + 2-byte valve trigger OFF VWC limit
8. 0x08 + 4-byte pulse counter offset
9. 0x09 + 1-byte water leak valve OFF trigger enable =1 , disable =0

SOIL SENSOR CALIBRATION

Sensors are already factory calibrated, but in case needed they may be recalibrated using USB terminal interface as described for device specific commands.

Put sensor in to water and issue command **water**, response OK.

Hold sensor in air and issue this command **air**, response OK.

For **ec** <uS/m> calibration put sensor int to liquid and set right sensor



PM-IO-5-SM LoRaWAN IO Module

reading value in uS/m.

We recommend Android mobile application for sensor setup and data reading/storage

SENSOR CALIBRATION ON ANDROID APP

1. open application & wait for USB connected status or connect
3. go to SETTINGS tab,
4. hold sensor in the air – click button AIR
5. submerge sensor in the water or soil with water, click button WATER
6. go to MAIN tab click read to test calibrated values

WATER LEAK DETECTOR

Water leak detector on trigger will interrupt device sleep and send message immediate with water leak flag enabled in settings byte. It will repeat sending this flag in 5 messages, then will reset the flag. If valve OFF on water leak trigger is enabled, then valve off will be triggered.

ANDROID APP

<https://play.google.com/store/apps/details?id=com.tinovi.soilmaster>



PM-IO-5-SM LoRaWAN IO Module

LoRaWAN GATEWAY CONNECTION

Device supports any LoRaWAN compatible gateway & network.

1. in case you are setting your own configuration parameters from TTN or other LoRaWAN operators, input DeviceEUI, AppEUI, AppKey to device config app and click "SET" button for each value, then remove USB cable from device and device will issue connect to gateway .
2. We have included USB-OTG adapters for connection to android device, but still you will require micro-usb charging cable for connection to device micro-usb connector (warning - battery should be removed while connecting to phone).
3. Android configuration app may be downloaded there:



The Things Network

To enable online monitoring via your TTN connected gateway and Tinovi default App UID you should

Android app: Click login in application main page, to signup with your google account.

- Attach LoRaWAN sensor to phone's USB OTG port, wait for status USB Connected and go to soil sensor application's settings tab.
- Click READ to read data from sensor or GENERATE button to generate new address data.
- Input your device's name without white spaces and click REGISTER OTAA button, to register device to cloud.
- Your device should appear on main tabs sensor list. Choose your sensor in list to see data from sensor.



PM-IO-5-SM LoRaWAN IO Module

JavaScript PAYLOAD DECODER

```
var bytesToInt = function(/*byte[]*/byteArray, dev) {
    var value = 0;
    for ( var i = 0; i < byteArray.length; i++) {
        value = (value * 256) + byteArray[i];
    }
    return value/dev;
};

var bytesToSignedInt = function(bytes, dev) {
    var sign = bytes[0] & (1 << 7);
    var x = ((bytes[0] & 0xFF) << 8) | (bytes[1] & 0xFF);
    if (sign) {
        x = 0xFFFF0000 | x;
    }
    return x/dev;
};

function Decoder(bytes, port) {
    var decoded = {};
    var pos = 1;
    decoded.valv=((bytes[0] >> 7) & 1);
    decoded.bat = bytes[pos++];
    if(((bytes[0] >> 0) & 1)===1){ //SOIL
        decoded.e25=bytesToInt(bytes.slice(pos,pos+2),100);
        pos = pos+2;
        decoded.ec=bytesToInt(bytes.slice(pos,pos+2),100);
        pos = pos+2;
        decoded.temp=bytesToSignedInt(bytes.slice(pos,pos+2),100);
        pos = pos+2;
        decoded.vwc=bytesToInt(bytes.slice(pos,pos+2),10);
        pos = pos+2;
    }
    if(((bytes[0] >> 1) & 1)===1){ //BME
        decoded.airTemp=bytesToSignedInt(bytes.slice(pos,pos+2),100);
        pos = pos+2;
        decoded.airHum=bytesToInt(bytes.slice(pos,pos+2),100);
        pos = pos+2;
        decoded.airPres=bytesToInt(bytes.slice(pos,pos+2),1)+50000;
        pos = pos+2;
    }
    if(((bytes[0] >> 2) & 1)===1){ //OPT
        decoded.lux=bytesToInt(bytes.slice(pos,pos+4),100);
        pos = pos+4;
    }
    if(((bytes[0] >> 4) & 1)===1){ //PULSE
        decoded.pulse=bytesToInt(bytes.slice(pos,pos+4),1);
        pos = pos+4;
    }
    return decoded;
}
```




PM-IO-5-SM LoRaWAN IO Module

ANDROID APP

You may use any android phone supporting OTG host option to configure USB and LoRaWAN sensors.

For LoRaWAN sensors data is streamed online via LoRaWAN gateways connected to TTN.

To enable online monitoring you should:

- Click login in application main page, to signup with your google account.
- Attach LoRaWAN sensor to phone's USB OTG port, wait for status USB Connected and go to soil sensor application's settings tab.
- Click READ to read address data from sensor.
- Input your device's name without white spaces and click REGISTER OTAA button, to register device to cloud.
- Your device should appear on main tabs sensor list. Choose your sensor in list to see data from sensor.

Tinovi Android application receives LoRaWAN sensors data via <https://zerver.io/graph> IoT cloud application. You may login to this dashboard tool using your google account and create nice dashboards to monitor your sensor data.

For USB sensor modification this application may be used as data logger, because it stores data readings to android flash memory and displays them to graphs. Data displayed in graphs may be copied to clipboard in CSV format and shared or saved to file.

Features

- * Online LoRaWAN sensor monitoring via TTN connected gateways.
- * Setup USB and LoRaWAN Tinovi soil sensors
- * Write USB and LoRaWAN sensor data to phone memory
- * View data on charts and export to CSV
- * Source code is [located there](#)

